


SP

弹簧护套

Spring sheath

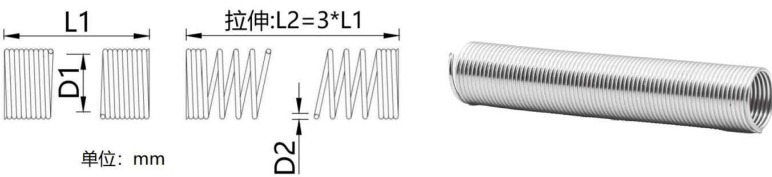

- 弹簧护套是用耐磨钢丝制造,能保护软管免受磨损,延长软管的使用寿命

■ 用法:先测量软管的外径,选择最接近内径尺寸的弹簧,剪下一段大约等于1/3软管长度的弹簧,把弹簧拉长至整个软管的长度,从弹簧缠绕的相反方向把弹簧旋入软管外层,然后加上接头扣压。
- The spring sheath is made of wear-resistant steel wire, which can protect the hose from wear and extend the life of the hose.

■ Usage: First measure the outer diameter of the hose, select the spring closest to the inner diameter, cut a section of spring approximately equal to 1/3 of the hose length, stretch the spring to the length of the entire hose, screw the spring into the outer layer of the hose from the opposite direction of the spring winding, and then add the connector buckle.

内径 D1	钢丝直径 D2	尺寸		型号 Type	产品编码 Product Code
L1	L2				
13	1.4	3000	9000	SP-13	CF40011313
15	1.4	3000	9000	SP-15	CF40011515
17	1.4	3000	9000	SP-17	CF40011717
18	1.5	3000	9000	SP-18	CF40011818
20	1.5	3000	9000	SP-20	CF40012020
22	1.5	3000	9000	SP-22	CF40012222
24	1.5	3000	9000	SP-24	CF40012424
25	1.5	3000	9000	SP-25	CF40012525
27	1.5	3000	9000	SP-27	CF40012727
30	2	3000	9000	SP-30	CF40013030
32	2	3000	9000	SP-32	CF40013232
34	2	3000	9000	SP-34	CF40013434
36	2.5	3000	9000	SP-36	CF40013636
38	2.5	3000	9000	SP-38	CF40013838
40	2.5	3000	9000	SP-40	CF40014040
42	2.5	3000	9000	SP-42	CF40014242
45	2.5	3000	9000	SP-45	CF40014545
46	2.5	3000	9000	SP-46	CF40014646
49	2.5	3000	9000	SP-49	CF40014949
51	3	2000	6000	SP-51	CF40015151
52	3	2000	6000	SP-52	CF40015252
54	3	2000	6000	SP-54	CF40015454
57	3	2000	6000	SP-57	CF40015757
60	3	2000	6000	SP-60	CF40016060
74	3	1500	4500	SP-74	CF40017474